

TRANSFER CASE GROUP

PAGE 175



FROM PAGE 175 THRU 192

INDEX OF ILLUSTRATIONS IN TRANSFER CASE GROUP

TYPE AND DESCRIPTION OF ILLUSTRATIONS	PAGE
Exploded View of Transfer Case (4x4).....	176
Sectional View of Transfer Case Control Shift Lever and Parts—Model T202.....	186
Sectional View of Transfer Case—Model T203.....	187
View of Transfer Case Control—Model T203.....	188-189
Exploded View of Transfer Case (6x6)—Model T223.....	190
View of Transfer Case Control—Model T223.....	191-192

INDEX OF TRANSFER CASE SUB-GROUP

NO. SUB-GROUP	PARTS IN SUB-GROUP	PAGE
0800	Transfer Case Assembly.....	178
0801	Transfer Case and Parts.....	178
0802	Transfer Case, Drive Gear—Shaft and Parts.....	179
0803	Transfer Case, Driven Gear and Parts.....	180-181
0804	Transfer Case, Idler Gear and Parts.....	181-182
0806	Transfer Case Control Rod and Parts.....	183
0806	Transfer Case Shift Fork—Lever and Parts.....	184
0808	Transfer Case Mounting Parts.....	185
—	Transfer Case Control Model T-202.....	186
—	Transfer Case Control Model T-203.....	187
—	Parts peculiar to Model T-203.....	188-189
—	Parts peculiar to Model T-223.....	191-192

MODEL T223
SEE PAGES 190-191



TRANSFER CASE—GROUP 08

PAGE 177

USED ON MODELS T202-207-211-215-214

INDEX

Ref. No.	Part Name	Sub-Group	Page No.	Ref. No.	Part Name	Sub-Group	Page No.
1	Drain PLUG.....	0801	178	33	Case Cover SCREW and LOCKWASHER.....	0801	178
2	Driven Gear Shaft Bearing Retainer GASKET—Front.....	0803	180	34	CASE COVER (Serviced in Assembly).....	0801	178
3	Driven GEAR.....	0803	180	35	Drive Gear Shaft Bearing Retainer SHIMS.....	0802	179
4	Driven Gear Bearing OIL SEAL Assembly.....	0803	181	36	Drive Gear Shaft Bearing Retainer GASKET.....	0802	179
6	Companion Yoke NUT.....	0901		37	Drive Gear Shaft Bearing CUP.....	0802	179
7	Propeller Shaft Companion Flange or YOKE.....	0901		38	Drive Gear Shaft Bearing RETAINER.....	0802	179
8	Driven Gear Shaft Bearing RETAINER—Front.....	0803	180	39	Drive Gear Shaft Bearing CONE AND ROLLERS.....	0802	179
9	Driven Gear Shaft Bearing CONE AND ROLLERS.....	0803	180	40	Drive Gear Bearing OIL SEAL Assembly.....	0802	179
10	Driven Gear Shaft Bearing CUP.....	0803	180	41	Propeller Shaft Companion Flange or YOKE.....	0901	
11	Driven Gear Shaft Front Bearing Retainer STUD—Short.....	0803	180	42	Companion Yoke NUT.....	0901	
12	Idler Gear Shaft Bearing Retainer and Driven Gear Shaft Front Bearing Retainer Stud NUTS AND LOCKWASHERS.....	0804	181-182	43	Drive Gear Shaft Bearing Retainer Stud NUTS AND LOCKWASHERS.....	0802	179
13	Idler Gear Shaft Bearing RETAINER—Front.....	0804	181	44	Drive Gear Shaft Bearing Retainer STUD—Long... ..	0802	179
14	Idler Gear Shaft Bearing CUP.....	0804	181	45	Idler Gear Shaft Bearing Retainer SHIMS.....	0804	182
15	Idler Gear Shaft Bearing CONE AND ROLLERS.....	0804	181	46	Idler Gear Shaft Bearing Retainer GASKET.....	0804	182
16	Idler Gear Shaft Bearing Retainer PLUG.....	0804	182	47	Filler PLUG.....	0801	178
17	Idler Gear Shaft Bearing Retainer GASKET.....	0804	181	48	Idler Gear Shaft Bearing RETAINER—Rear.....	0804	182
18	Idler GEAR.....	0804	181	49	Idler Gear SHAFT.....	0804	181
19	Drive Gear Shaft Bearing Retainer STUD NUTS AND LOCKWASHERS.....	0802	179	50	Shift Rail Poppet SCREW.....	0806	184
20	Drive Gear Shaft Bearing RETAINER.....	0802	179	51	Shift Rail Poppet Ball SPRING.....	0806	184
22	Companion Yoke NUT.....	0901		52	Shift Rail Poppet BALL.....	0806	184
23	Propeller Shaft Companion Flange or YOKE.....	0901		53	Shift Fork LOCK SCREW AND LOCKWIRE.....	0806	184
24	Drive Gear Bearing OIL SEAL Assembly.....	0802	179	54	Idler Gear Shaft Bearing CONE AND ROLLERS.. ..	0804	181
25	Drive Gear Shaft Bearing CONE AND ROLLERS.....	0802	179	55	Idler Gear Shaft Bearing CUP.....	0804	181
26	Drive Gear Shaft Bearing CUP.....	0802	179	56	Idler Shaft Bearing Retainer Stud NUTS AND LOCKWASHERS.....	0804	181-182
27	Drive Gear Shaft Bearing Retainer GASKET.....	0802	179	57	Shift RAIL.....	0806	184
28	Drive Gear SHAFT.....	0802	179	58	Shift Rail OIL SEAL Assembly.....	0806	184
29	CASE AND COVER Assembly.....	0800	178	59	Driven Gear SHAFT.....	0803	180
30	Drive GEAR.....	0802	179	60	Driven Gear Shaft Bearing RETAINER—Rear.....	0803	180
31	Case and Cover GASKET.....	0801	178	61	Driven Gear Shaft Bearing CONE AND ROLLERS.....	0803	180
32	Vent Nipple, CAP and COTTER.....	0801	178	62	Driven Gear Shaft Bearing CUP.....	0803	180
				63	Driven Gear Shaft Bearing Retainer GASKET.....	0803	181
				64	Driven Gear Shaft Bearing Retainer SHIMS—Rear.....	0803	181
				65	Case Cover Taper (Dowel) PIN.....	0801	188
				66	Shift FORK.....	0806	184
				67	Shift Rail Expansion PLUG.....	0806	184

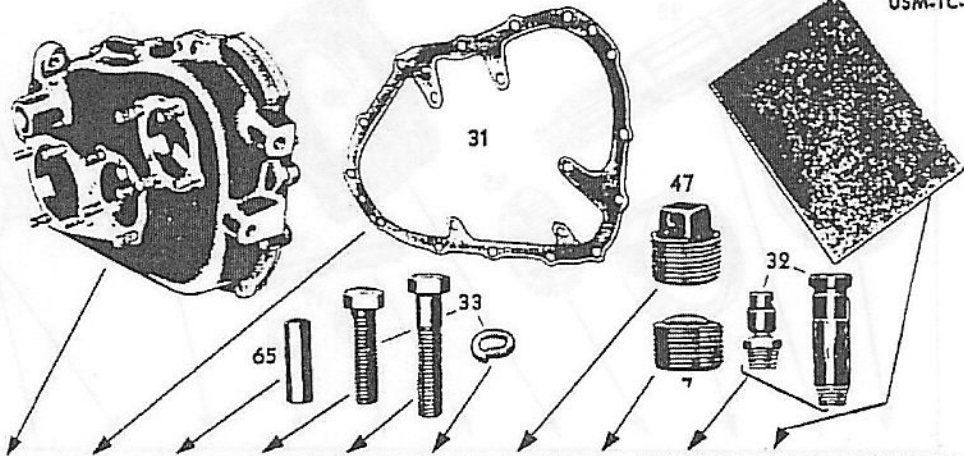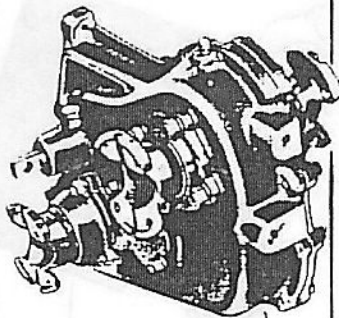
TRANSFER CASE PARTS—SUB-GROUP 0801☆ Not Used

: CURRENT NUMBER—FOR PREVIOUS NUMBER SEE PARTS SUPERSEDEANCE LIST.

TRANSFER CASE—GROUP 08

PAGE 1

DRIVE GEAR—SHAFT AND PARTS—SUB-GROUP 0802

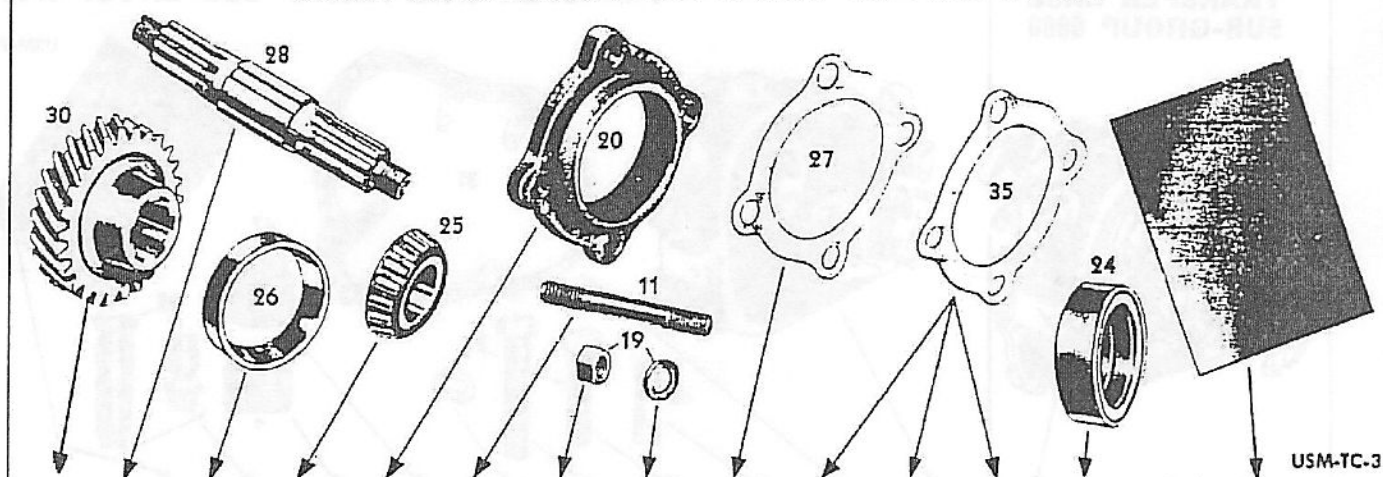

USM-TC-3

Transfer Case Drive Gear	Drive Gear Shaft	Drive Gear Shaft Bearing Cup Front and Rear	Drive Gear Shaft Bearing Cone Front and Rear	Drive Gear Shaft Bearing Retainer Front and Rear	Bearing Retainer Stud (Long)	Bearing Stud Nut	Retainer Stud Nut Lock-Wash'R	Retainer Gasket	Bearing Retainer Shim (.005\")	Bearing Retainer Shim (.010\")	Bearing Retainer Shim (.012\")	Bearing Oil Seal Assembly	TRANSFER CASE OIL SEAL KIT ⚙	TRANSFER CASE OIL SHIM PACKAGE ⚙
1 Req'd	1 Req'd	2 Req'd	2 Req'd	2 Req'd	8 Req'd	8 Req'd	8 Req'd	2 Req'd	As Req'd	As Req'd	As Req'd	1 Req'd	1 Req'd	1 Req'd
599455	599458	698394	912161	599465	912401	120370	120383	599468	599473	599474	599475	599463	☆	996417

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 187-188-189

916305	599458	698394	912161	599465	912401	120370	120383	599468	599473	599474	599475	599463	1056077	996417
916305	599458	698394	912161	599465	912401	120370	120383	599468	599473	599474	599475	599463	1056077	996417
916305	599458	698394	912161	599465	912401	120370	120383	599468	599473	599474	599475	599463	1056077	996417

THIS MODEL NOT EQUIPPED WITH TRANSFER CASE

THIS MODEL NOT EQUIPPED WITH TRANSFER CASE

916385	599458	698394	912161	599465	912401	120370	120383	599468	599473	599474	599475	599463	1056077	996417
--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	---------	--------

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191-192


☆ Not Used

⚙ FOR CONTENTS OF SERVICE PACKAGES SEE BILL OF MATERIAL SECTION.

TRANSFER CASE—GROUP 08

DRIVEN GEAR AND PARTS—SUB-GROUP 0803

USM-TC-4

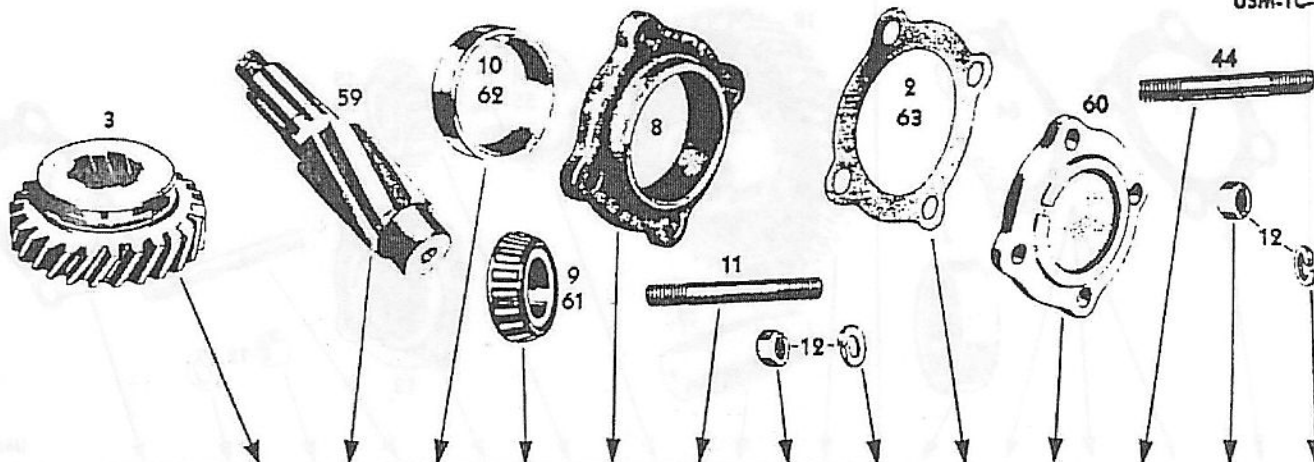


YEAR AND ENGINEERING SYMBOL	Transfer Case Driven GEAR	Driven Gear SHAFT	Driven Gear Shaft Bearing CUP Front and Rear	Driven Gear Shaft Bearing CONE Front and Rear	Shaft Bearing RE- TAINER (Front)	Shaft Bearing Retainer STUD (Short)	Shaft Bearing Retainer Stud NUT	Bearing Retainer Stud Nut LOCK- WASH'R	Bearing Retainer GASKET	Bearing RE- TAINER (Rear)	Bearing Retainer STUD (Long)	Bearing Retainer Stud NUT	Bearing Retainer Stud Nut LOCK- WASH'R
	1 Req'd	1 Req'd	2 Req'd	2 Req'd	1 Req'd	4 Req'd	4 Req'd	4 Req'd	1 Req'd	1 Req'd	4 Req'd	4 Req'd	4 Req'd
1940—T202	599457	599460	698394	912161	599464	912400	120370	120383	599467	599466	912401	120370	120383
1940—T203	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 187-188-189												
1941—T207	916514	599460	698394	912161	599464	912400	120370	120383	599467	599466	912401	120370	120383
1941—T211	916514	599460	698394	912161	599464	912400	120370	120383	599467	599466	912401	120370	120383
1941—T215	916514	599460	698394	912161	599464	912400	120370	120383	599467	599466	912401	120370	120383
1941—T112	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE												
1941—T118	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE												
1942—T214	916514	599460	698394	912161	599464	912400	120370	120383	599467	599466	912401	120370	120383
1943—T223	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191-192												

TRANSFER CASE—GROUP 08

PAGE 18

DRIVEN GEAR AND PARTS—SUB-GROUP 0803 IDLER GEAR AND PARTS—SUB-GROUP 0804

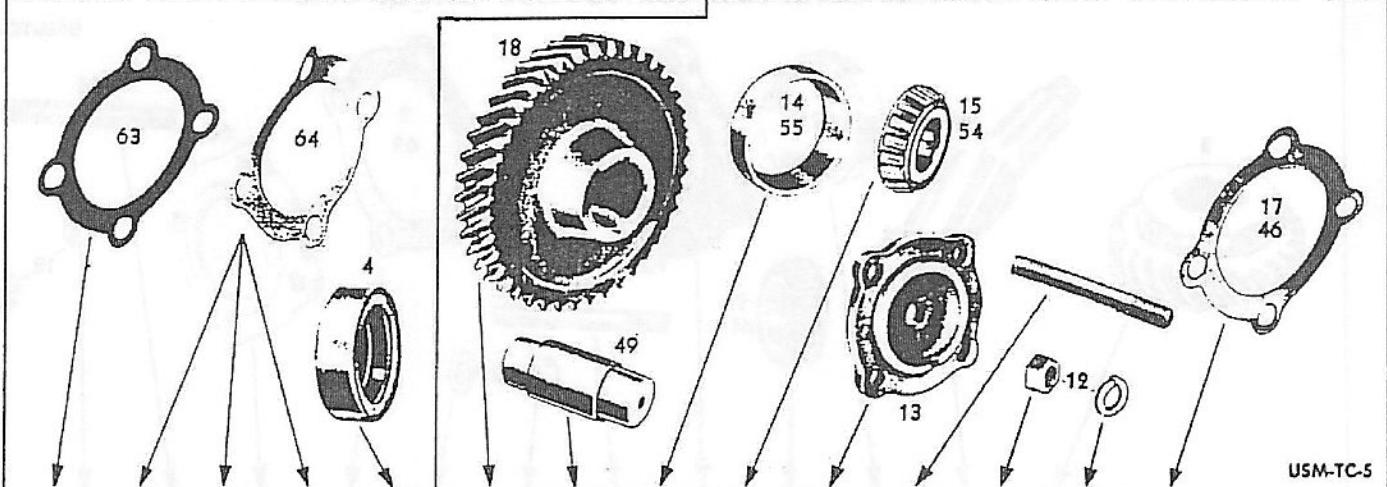

Bearing Retainer GASKET	Bearing SHIM (.005")	Bearing SHIM (.010")	Bearing SHIM (.012")	OIL SEAL Assem'y	Transfer Case Idler GEAR	Idler Gear SHAFT	Idler Gear Shaft Bearing CUP Front and Rear	Idler Gear Shaft Bearing CONE Front and Rear	Bearing RE-TAINER (Front)	Bearing Retainer STUD (Long)	Bearing Retainer Stud NUT	Bearing Retainer Stud Nut LOCK-WASH'R	Bearing Retainer GASKET
1 Req'd	As Req'd	As Req'd	As Req'd	1 Req'd	1 Req'd	1 Req'd	2 Req'd	2 Req'd	1 Req'd	4 Req'd	4 Req'd	4 Req'd	1 Req'd
599469	599470	599471	599472	599463	599456	599459	698394	912161	913663	912401	120370	120383	599469

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 187-188-189

599469	599470	599471	599472	599463	916512	599459	698394	912161	913663	912401	120370	120383	599469
599469	599470	599471	599472	599463	916512	599459	698394	912161	913663	912401	120370	120383	599469
599469	599470	599471	599472	599463	916512	599459	698394	912161	913663	912401	120370	120383	599469

THIS MODEL NOT EQUIPPED WITH TRANSFER CASE


THIS MODEL NOT EQUIPPED WITH TRANSFER CASE

599469	599470	599471	599472	599463	916512	599459	698394	912161	913663	912401	120370	120383	2 Req'd 599469
--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	--------	-------------------

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191-192

TRANSFER CASE—GROUP 08

IDLER GEAR AND PARTS—SUB-GROUP 0804

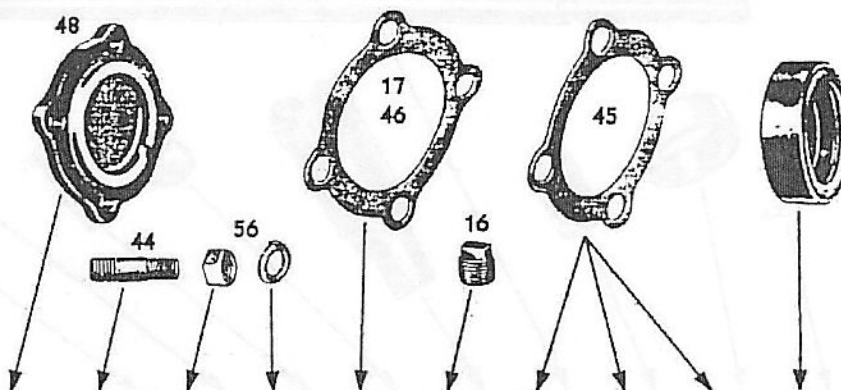


USM-TC-6

YEAR AND ENGINEERING SYMBOL	Idler Gear Shaft Bearing RE- TAINER (Rear)	Idler Gear Shaft Bearing Retainer STUD (Long)	Bearing Retainer Stud NUT	Bearing Retainer Stud Nut LOCK- WASH'R	Bearing Retainer GASKET	Bearing Retainer PLUG	Bearing Retainer SHIM (.005")	Bearing Retainer SHIM (.010")	Bearing Retainer SHIM (.012")	OIL SEAL Assem- bly	
	1 Req'd	4 Req'd	4 Req'd	4 Req'd	1 Req'd	1 Req'd	As Req'd	As Req'd	As Req'd	1 Req'd	
1940—T202	599466	912401	120370	120383	599469	103867	599470	599471	599472	599463	
1940—T203	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 187-188-189										
1941—T207	599466	912401	120370	120383	599469	103867	599470	599471	599472	599463	
1941—T211	599466	912401	120370	120383	599469	103867	599470	599471	599472	599463	
1941—T215	599466	912401	120370	120383	599469	103867	599470	599471	599472	599463	
1941—T112	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE										
1941—T118	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE										
1942—T214	599466	912401	120370	120383	2 Req'd 599469	103867	599470	599471	599472	599463	
1943—T223	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191-192										

TRANSFER CASE—GROUP 08

PAGE 10

SHIFT SHAFT—LEVER-FORK—SUB-GROUP 0806

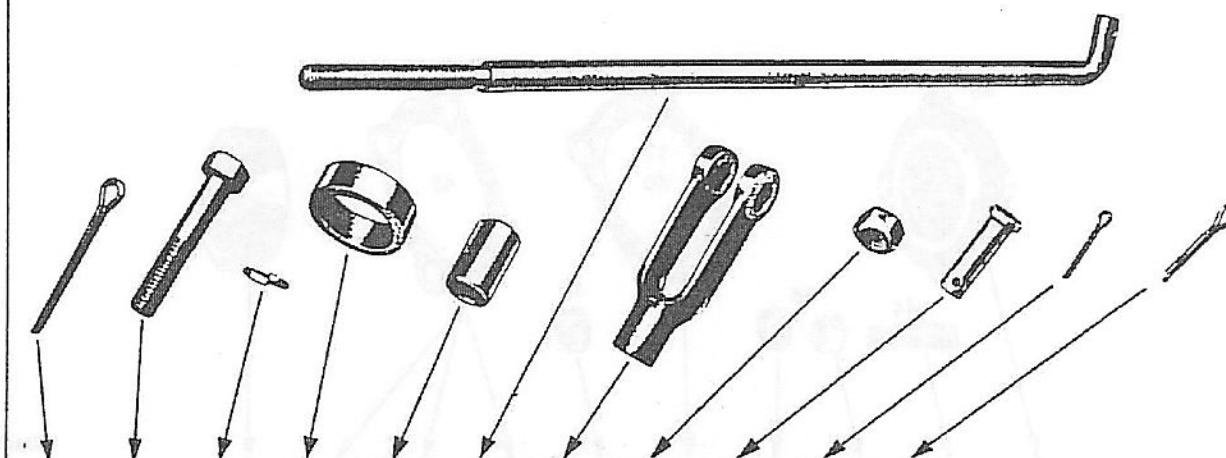

USM-TC-7

Hand Lever Bracket Cotter PIN	Hand Lever Bracket SCREW (Bracket to Trans- mission)	Bracket Screw LOCK- WASH'R	Bracket SPACER (Upper)	Bracket SPACER (Lower)	Transfer Case Control ROD	Control Rod YOKE	Control Rod Yoke LOCK- NUT	Control Rod Clevis PIN	Control Rod Cotter PIN	Control Rod Cotter PIN (Rod)	
1 Req'd	3 Req'd	3 Req'd	2 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	

SEE SPECIAL SPECIFICATION CHART ON PAGE NO. 106

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 107-109

103399	122181	120382	914510	914511	915407	104038	120369	138084	103373	100630	
103399	122181	120382	914510	914511	915407	104038	120369	138084	103373	100630	
103399	122181	120382	914510	914511	915407	104038	120369	138084	103373	100630	

THIS MODEL NOT EQUIPPED WITH TRANSFER CASE

THIS MODEL NOT EQUIPPED WITH TRANSFER CASE


103399	1 Req'd 122181	1 Req'd 120382	1 Req'd 921065	2 Req'd 914510	924416	104038	120369	138084	121222	100630	
--------	-------------------	-------------------	-------------------	-------------------	--------	--------	--------	--------	--------	--------	--

FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191-192

TRANSFER CASE—GROUP 08

SHIFT SHAFT—LEVER-FORK—SUB-GROUP 0806


USM-TC-8

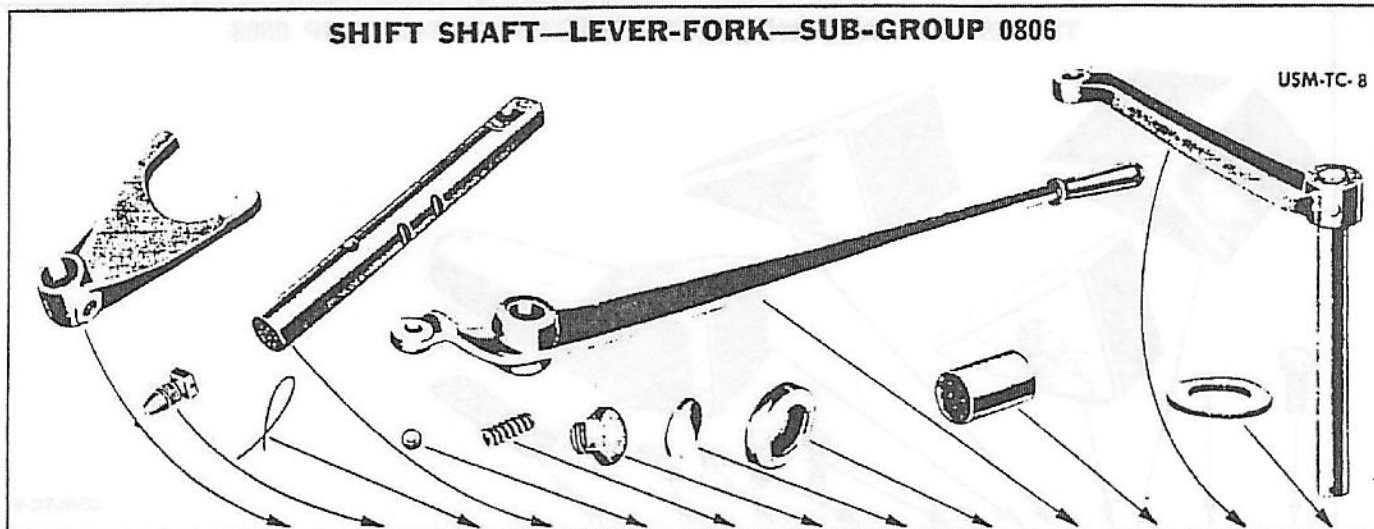

YEAR AND ENGINEERING SYMBOL	Transfer Case Shift FORK	Shift Fork SCREW (Lock)	Shift Fork Screw LOCK- WIRE	Shift RAIL	Shift Rail Poppet BALL	Shift Rail Poppet SPRING	Shift Rail Poppet SCREW	Shift Rail Expan- sion PLUG	Shift Rail Oil SEAL Assembly	Control Hand LEVER Assembly	Hand Lever BUSH- ING	Hand Lever BRA'KT and SHAFT ASSEM- BLY	Hand Lever Bracket Plain WASH'R (Shaft)
	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd	1 Req'd
1940—T202	599477	517362	556944	599476	104919	579195	599478	103893	SEE NOTE 2	SEE SPECIAL SPECIFICATION CHART ON PAGE NO. 186			
1940—T203	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 187-188-189												
1941—T207	599477	517362	556944	599476	104919	579195	599478	103893	915561	915402	667742	915404	131017
1941—T211	599477	517362	556944	599476	104919	579195	599478	103893	915561	915402	667742	915404	131017
1941—T215	599477	517362	556944	599476	104919	579195	599478	103893	915561	915402	667742	915404	131017
1941—T112	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE												
1941—T118	THIS MODEL NOT EQUIPPED WITH TRANSFER CASE												
1942—T214	599477	517362	14155	599476	104919	579195	599478	103893	915561	See Note 1 915402	667742	921863	131017
1943—T223	FOR SPECIFYING SHEETS FOR THIS MODEL SEE PAGES 190-191												

NOTE 1

 Control Hand Lever and Bushing Assembly


For Ambulance Only.
Use Part No. 925865

For Model T-214 Only

NOTE 2

Specify 1—599479 Transfer Case Shift
Rail Felt WASHER1—599480 Transfer Case Shift
Rail Felt Washer RETAINER

USM-TC-9

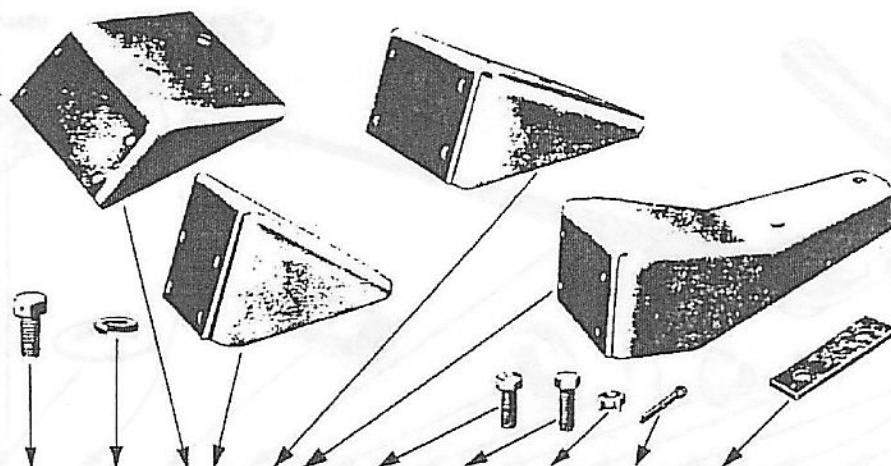[illegible]

☆ Not Used

NOTE 1

Model T214 up to Serial No. 81629474
except 81614110 through 81619000

Use 4-915560 Mounting Bolt—Long
4-128012 Mounting Bolt Nut

Model T214 after Serial No. 81629474
also on 81614110 through 81619000

Use 4-928716 Mounting Bolt—Long
4-128014 Mounting Bolt Nut

Model T214 up to Serial No. 81628435
except 81612927 through 81619000


Use 4-925147 Mounting Bolt—Short
4-128012 Mounting Bolt Nut

Model T214 after Serial No. 81628435
also on 81612927 through 81619000

Use 4-928715 Mounting Bolt—Short
4-128014 Mounting Bolt Nut

TRANSFER CASE—GROUP 08

TRANSFER CASE CONTROL SHIFT LEVER AND PARTS— MODEL T202 ONLY

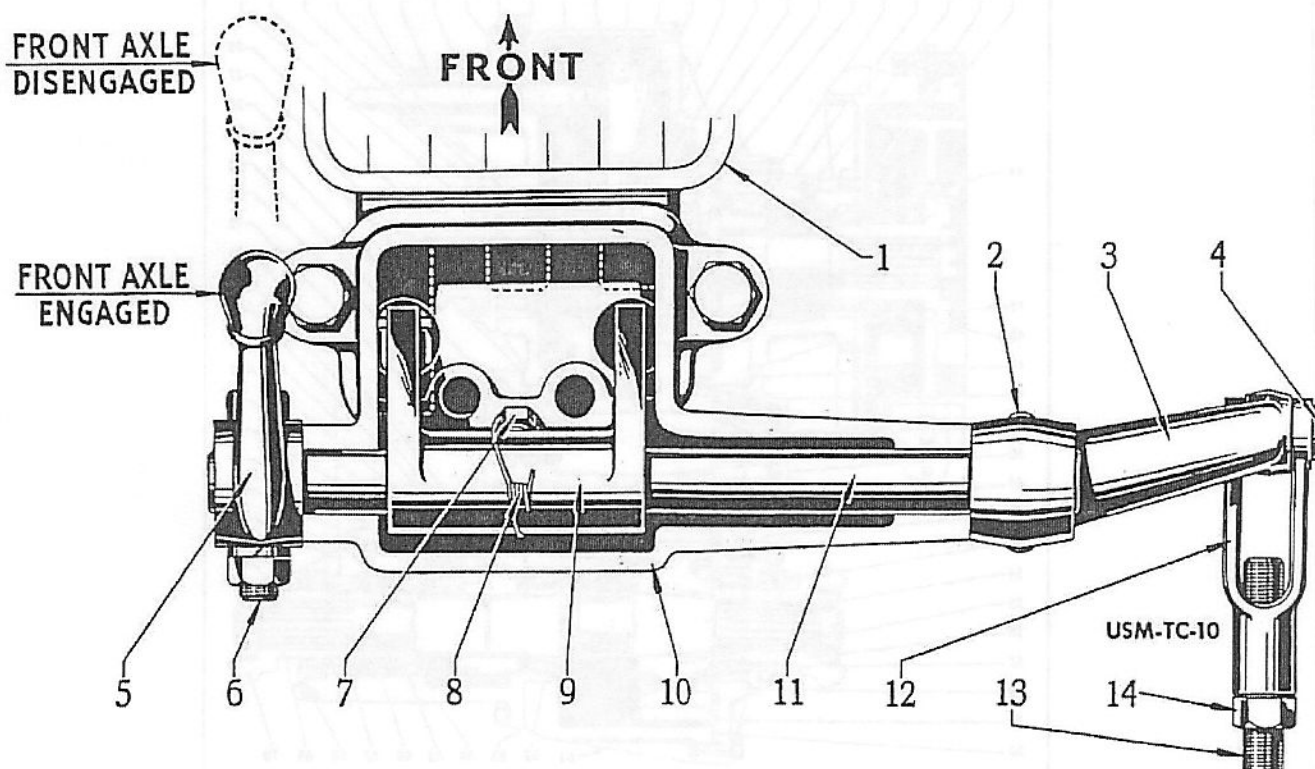


PART SHOWN IN ILLUSTRATION ABOVE			PARTS NOT ILLUSTRATED	
Ref. No.	Part Name	Part No.	Part Name	Part No.
1	TRANSMISSION Assembly.....		Transfer Case Control Housing SCREW (Long).....	122194
2	Transfer Case Control Shift Lever Shaft PIN.....	142521	Transfer Case Control Housing SCREW (Short).....	122181
3	Transfer Case Control Shift LEVER and SHAFT Assembly ...	599398	Transfer Case Control Housing Screw LOCKWASHER.....	120382
4	Transfer Case Control Rod Clevis PIN.....	138084	Transfer Case Control Housing GASKET.....	599397
5	Transfer Case Control Hand LEVER.....	599402	Transfer Case Control Shift Lever Shaft KEY.....	912045
6	Transfer Case Control Hand Lever Clamp BOLT.....	120668	Transfer Case Control Rod Yoke Lock NUT.....	120369
7	Transfer Case Control First and Reverse Lock Lever SCREW...	517362	Transfer Case Control Rod Cotter PIN.....	103373
8	Transfer Case Control First and Reverse Lock Lever Screw LOCKWIRE.....	556944		
9	Transfer Case Control First and Reverse Lock LEVER.....	599400		
10	Transfer Case Control HOUSING.....	599394		
11	Transfer Case Control Shift LEVER and SHAFT Assembly ...	599398		
12	Transfer Case Control Rod YOKE.....	104038		
13	Transfer Case Control ROD.....	599404		
14	Transfer Case Control Rod Yoke Lock NUT.....	120369		

: CURRENT NUMBER—FOR PREVIOUS NUMBER, SEE PARTS SUPERSEDEENCE LIST.

TRANSFER CASE—GROUP 08

PAGE 10

TRANSFER CASE—SUB-GROUP 0800 MODEL T203

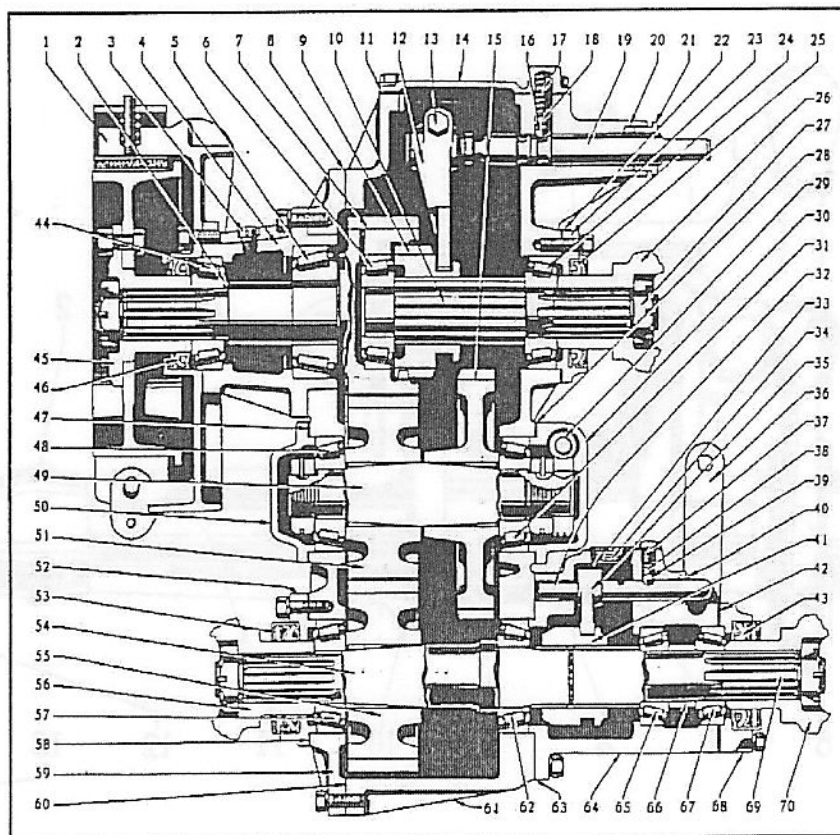

USM—TC—11

Ref. No.	Part Name	Ref. No.	Part Name
1	Drive Pinion Rear Bearing RETAINER	36	Declutch Shifter Shaft LEVER
2	Drive Pinion Rear Bearing SHIM	37	Declutch Shifter Shaft Ball LOCK SCREW
3	Breather NIPPLE AND CAP	38	Declutch Shifter Shaft Ball SPRING
4	Drive Pinion Bearing CAGE AND CUP Assembly	39	Declutch Shifter Shaft BALL
5	Drive Pinion Front BEARING	40	Declutch Shifter SHAFT
6	Main Shaft Rear BEARING	41	Declutch Shaft Sliding CLUTCH
7	Drive PINION	42	Declutch Shaft Carrier Cover GASKET AND SHIMS
8	Case Cover GASKET	43	Declutch Shaft OIL SEAL
9	Sliding GEAR	44	Drive Pinion Rear BEARING
10	MAINSHAFT	45	Drive Pinion FLANGE
11	Shifter Cover GASKET	46	Drive Pinion Rear Bearing Retainer OIL SEAL
12	Shifter FORK	47	Idler Shaft Rear Cover GASKET AND SHIMS
13	Shifter Fork Clamp BOLT	48	Idler Shaft BEARING
14	Shifter COVER	49	Idler SHAFT
15	Low Speed GEAR	50	Idler Shaft Rear COVER (or Cap)
16	Shifter Shaft Lock BALL	51	Idler GEAR
17	Shifter Shaft Lock Plunger SPRING	52	Driven Shaft Rear COVER (or Cap)
18	Shifter Shaft Lock PLUNGER	53	Driven Shaft Rear OIL SEAL
19	Shifter SHAFT	54	Driven SHAFT
20	Shifter Shaft PACKING	55	Driven GEAR
21	Shifter Shaft Packing NUT	56	Companion YOKE—Rear
22	Main Shaft Front Cap GASKET AND SHIMS	57	Driven Shaft Rear BEARING
23	Mainshaft Front COVER (or Cap)	58	Driven Shaft Rear Bearing Cover SHIMS
24	Mainshaft Front BEARING	59	Case COVER (see Case and Cover)
25	Mainshaft Front OIL SEAL	60	Case Cover GASKET
26	Companion YOKE—Front	61	TRANSFER CASE (Includes Cover)
27	Companion Yoke NUT	62	Driven Shaft Front BEARING
28	Idler Shaft Front Cover GASKET AND SHIMS	63	Declutch Shaft Carrier to Case GASKET
29	Speedometer Drive PINION	64	Declutch Shaft CARRIER
30	Idler Shaft Front COVER	65	Declutch Shaft BEARING
31	Idler Shaft BEARING	66	Declutch Shaft Bearing SPACER
32	Speedometer Drive GEAR	67	Declutch Shaft BEARING
33	Declutch Shaft Sliding Clutch Shift Fork LOCK SCREW	68	Declutch Shaft Carrier COVER
34	Declutch Shaft Carrier Hole PLUG	69	Declutch SHAFT
35	Declutch Shaft Sliding Clutch Shift FORK	70	Companion YOKE—Front

TRANSFER CASE—GROUP 08

PARTS PECULIAR TO MODEL T203

TRANSFER CASE ASSEMBLY—SUB-GROUP 0800

1 Req'd—594066 TRANSFER CASE Assembly

TRANSFER CASE—COVER AND PARTS—SUB-GROUP 0801

- 1 Req'd—599822 Transfer CASE AND COVER Assembly (Less Gears)
- 1 Req'd—568660 Transfer Case Cover GASKET
- 2 Req'd—100360 Transfer Case Cover PIN
- 16 Req'd—120233 Transfer Case Cover SCREW
- 16 Req'd—120382 Transfer Case Cover Screw LOCKWASHER
- 1 Req'd—666853 Transfer Case Filler PLUG
- 1 Req'd—2697322 Transfer Case Vent NIPPLE Assy.
- 1 Req'd—557056 Transfer Case Vent Nipple CAP
- 1 Req'd—103373 Transfer Case Vent Nipple Cap Cotter PIN

TRANSFER CASE PARTS—SUB-GROUP 0802

- 1 Req'd—568698 Transfer Case Sliding GEAR
- 1 Req'd—589198 Transfer Case Low Speed GEAR
- 1 Req'd—589188 Transfer Case Drive PINION
- 1 Req'd—568874 Transfer Case Drive Pinion Bearing CAGE AND CUP Assembly
- 1 Req'd—568685 Transfer Case Drive Pinion Bearing Cage GASKET
- 6 Req'd—120233 Transfer Case Drive Pinion Bearing CAGE SCREW
- 6 Req'd—120382 Transfer Case Drive Pinion Bearing Cage Screw LOCKWASHER
- 1 Req'd—503229 Transfer Case Drive Pinion Bearing CUP (Front)
- 1 Req'd—304003 Transfer Case Drive Pinion Bearing CUP (Rear)
- 1 Req'd—568683 Transfer Case Drive Pinion Bearing CONE (Front)
- 1 Req'd—568675 Transfer Case Drive Pinion Bearing CONE (Rear)
- 1 Req'd—588964 Transfer Case Drive Pinion Bearing RETAINER (Rear)
- 1 Req'd—594548 Transfer Case Drive Pinion Rear Bearing Retainer GASKET
- 4 Req'd—122138 Transfer Case Drive Pinion Rear Bearing Retainer SCREW
- 4 Req'd—120382 Transfer Case Drive Pinion Rear Bearing Retainer Screw LOCKWASHER
- 1 Req'd—568688 Transfer Case Drive Pinion Rear Bearing Retainer OIL SEAL
- As Req'd—568677 Transfer Case Drive Pinion Rear Bearing Retainer SHIM (.020)
- As Req'd—568678 Transfer Case Drive Pinion Rear Bearing Retainer SHIM (.026)
- As Req'd—568679 Transfer Case Drive Pinion Rear Bearing Retainer SHIM (.030)
- As Req'd—589184 Transfer Case Drive Pinion Rear Bearing Retainer SHIM (.034)
- 1 Req'd—568526 Transfer Case Drive Pinion Rear Bearing Retainer NUT (Rear)
- 1 Req'd—119209 Transfer Case Drive Pinion Rear Bearing Retainer Nut Cotter PIN
- 1 Req'd—568676 Transfer Case Main SHAFT
- 2 Req'd—304003 Transfer Case Main Shaft Bearing CUP Front and Rear
- 2 Req'd—568675 Transfer Case Main Shaft Bearing CONE Front and Rear
- 1 Req'd—568669 Transfer Case Main Shaft Front COVER (or Cap)
- 1 Req'd—568671 Transfer Case Main Shaft Front Cover GASKET
- 4 Req'd—120233 Transfer Case Main Shaft Front Cover SCREW
- 4 Req'd—120382 Transfer Case Main Shaft Front Cover Screw LOCKWASHER
- As Req'd—589182 Transfer Case Main Shaft Front Cover SHIM (.003)
- As Req'd—589181 Transfer Case Main Shaft Front Cover SHIM (.005)
- As Req'd—568670 Transfer Case Main Shaft Front Cover SHIM (.010)
- 1 Req'd—568674 Transfer Case Main Shaft Front Cover OIL SEAL Assembly

TRANSFER CASE PARTS—SUB-GROUP 0803

- 1 Req'd—589200 Transfer Case Driven GEAR
- 1 Req'd—594125 Transfer Case Driven Gear SHAFT
- 2 Req'd—304003 Transfer Case Driven Gear Shaft Bearing CUP
- 2 Req'd—Transfer Case Driven Gear Shaft Bearing Cone (Specify 1—314951—Front, 1—568675—Rear)
- 1 Req'd—568669 Transfer Case Driven Shaft Rear Bearing COVER (or Cap)
- 1 Req'd—568671 Transfer Case Driven Shaft Rear Bearing Cover GASKET
- 4 Req'd—120233 Transfer Case Driven Shaft Rear Bearing Cover SCREW
- 4 Req'd—120382 Transfer Case Driven Shaft Rear Bearing Cover Screw LOCKWASHER
- As Req'd—589182 Transfer Case Driven Shaft Rear Bearing Cover SHIM (.003)
- As Req'd—589181 Transfer Case Driven Shaft Rear Bearing Cover SHIM (.005)
- As Req'd—568670 Transfer Case Driven Shaft Rear Bearing Cover SHIM (.010)

1 Req'd—589208 Transfer Case Driven Gear Shaft Bearing OIL SEAL Assembly

TRANSFER CASE PARTS—SUB-GROUP 0804

- 1 Req'd—589199 Transfer Case Idler GEAR
- 1 Req'd—589189 Transfer Case Idler Gear SHAFT
- 2 Req'd—304003 Transfer Case Idler Gear Shaft Bearing CUP (Front and Rear)
- 2 Req'd—568675 Transfer Case Idler Gear Shaft Bearing CONE (Front and Rear)
- 1 Req'd—594638 Transfer Case Idler Shaft Front COVER (or Cap) Assembly
- 1 Req'd—568696 Transfer Case Idler Shaft Front Cover GASKET
- 1 Req'd—122168 Transfer Case Idler Shaft Front Cover SCREW (Long)
- 3 Req'd—122126 Transfer Case Idler Shaft Front Cover SCREW Short
- 4 Req'd—120382 Transfer Case Idler Shaft Front Cover Screw LOCKWASHER
- As Req'd—589191 Transfer Case Idler Shaft Front Cover SHIM (.003)
- As Req'd—589192 Transfer Case Idler Shaft Front Cover SHIM (.005)
- As Req'd—589193 Transfer Case Idler Shaft Front Cover SHIM (.010)
- 1 Req'd—589196 Transfer Case Idler Shaft Rear COVER (or Cap)
- 1 Req'd—568671 Transfer Case Idler Shaft Rear Cover GASKET
- 4 Req'd—122126 Transfer Case Idler Shaft Rear Cover SCREW
- 4 Req'd—120382 Transfer Case Idler Shaft Rear Cover Screw LOCKWASHER
- As Req'd—589182 Transfer Case Idler Shaft Rear Cover SHIM (.003)
- As Req'd—589181 Transfer Case Idler Shaft Rear Cover SHIM (.005)
- As Req'd—568670 Transfer Case Idler Shaft Rear Cover SHIM (.010)
- 2 Req'd—589187 Transfer Case Idler Shaft Rear Cover NUT
- 2 Req'd—589195 Transfer Case Idler Shaft Rear Cover Snap RING

TRANSFER CASE PARTS—SUB-GROUP 0805

- 1 Req'd—598191 Transfer Case Declutch SHAFT CARRIER
- 1 Req'd—589202 Transfer Case Declutch Shaft Carrier COVER
- 1 Req'd—589206 Transfer Case Declutch Shaft Carrier Cover GASKET
- 4 Req'd—120240 Transfer Case Declutch Shaft Carrier Cover SCREW
- 4 Req'd—120214 Transfer Case Declutch Shaft Carrier Cover Screw LOCKWASHER
- As Req'd—589203 Transfer Case Declutch Shaft Carrier Cover SHIM (.003)
- As Req'd—589204 Transfer Case Declutch Shaft Carrier Cover SHIM (.005)
- As Req'd—589205 Transfer Case Declutch Shaft Carrier Cover SHIM (.010)
- 6 Req'd—120233 Transfer Case Declutch Shaft Carrier Cover SCREW (to Case)
- 6 Req'd—120382 Transfer Case Declutch Shaft Carrier Cover Screw LOCKWASHER
- 1 Req'd—589207 Transfer Case Declutch Shaft Carrier Cover GASKET (to Case)
- 1 Req'd—666853 Transfer Case Declutch Shaft Carrier Cover Oil PLUG
- 1 Req'd—589209 Transfer Case Declutch SHAFT
- 2 Req'd—698409 Transfer Case Declutch Shaft Bearing CUP
- 2 Req'd—589211 Transfer Case Declutch Shaft Bearing CONE
- 1 Req'd—589212 Transfer Case Declutch Shaft Bearing SPACER
- 1 Req'd—589208 Transfer Case Declutch Shaft Bearing OIL SEAL
- 1 Req'd—589213 Transfer Case Declutch Shaft Sliding CLUTCH
- 1 Req'd—589214 Transfer Case Declutch Shaft Sliding Clutch Shift FORK
- 1 Req'd—589215 Transfer Case Declutch Shaft Sliding Clutch Shift Fork SCREW
- 1 Req'd—598192 Transfer Case Declutch Shifter SHAFT
- 1 Req'd—103373 Transfer Case Declutch Shifter Shaft Cotter PIN
- 1 Req'd—596351 Transfer Case Declutch Shifter Shaft OIL SEAL
- 1 Req'd—596352 Transfer Case Declutch Shifter Shaft Oil Seal RETAINER
- 1 Req'd—104919 Transfer Case Declutch Shifter Shaft BALL
- 1 Req'd—589217 Transfer Case Declutch Shifter Shaft Ball SPRING
- 1 Req'd—594127 Transfer Case Declutch Shifter Shaft Ball LOCK SCREW
- 1 Req'd—138489 Transfer Case Declutch Shifter Shaft Ball Lock Screw LOCKWASHER
- 1 Req'd—589219 Transfer Case Declutch Shifter Shaft LEVER
- 1 Req'd—589220 Transfer Case Declutch Shifter Shaft Lever STUD
- 1 Req'd—125250 Transfer Case Declutch Shifter Shaft Lever Stud NUT
- 1 Req'd—108636 Transfer Case Declutch Shifter Shaft Lever Stud Cotter PIN
- 1 Req'd—120396 Transfer Case Declutch Shifter Shaft Lever Stud WASHER
- 1 Req'd—598386 Transfer Case Declutch Shifter Shaft Lever ROD Assembly
- 1 Req'd—104038 Transfer Case Declutch Shifter Shaft Lever Rod YOKE
- 1 Req'd—120369 Transfer Case Declutch Shifter Shaft Lever Rod Yoke End NUT
- 1 Req'd—138084 Transfer Case Declutch Shifter Shaft Lever Rod Yoke End Clevis PIN
- 1 Req'd—103373 Transfer Case Declutch Shifter Shaft Lever Rod Yoke Cotter PIN (Front)

: CURRENT NUMBER—FOR PREVIOUS NUMBER, SEE PARTS SUPERSEDEENCE LIST.

TRANSFER CASE—GROUP 08

PAGE 18

PARTS PECULIAR TO MODEL T203—Cont'd

TRANSFER CASE PARTS—SUB-GROUP 0805—CONT'D

- 1 Req'd—119209 Transfer Case Declutch Shifter Shaft Lever Rod Yoke Cotter PIN (Rear)
- 1 Req'd—120395 Transfer Case Declutch Shifter Shaft Lever Rod Yoke End WASHER
- 1 Req'd—589139 Transfer Case Gearshift Lever SHAFT AND LEVER Assembly
- 1 Req'd—142533 Transfer Case Gearshift Lever Shaft Groove PIN
- 1 Req'd—589142 Transfer Case Declutch Upper LEVER
- 1 Req'd—123798 Transfer Case Declutch Upper Lever BOLT
- 1 Req'd—120368 Transfer Case Declutch Upper Lever Bolt NUT
- 1 Req'd—120214 Transfer Case Declutch Upper Lever Bolt Nut LOCK-WASHER
- 1 Req'd—106750 Transfer Case Declutch Upper Lever KEY

TRANSFER CASE PARTS—SUB-GROUP 0806


- 1 Req'd—589143 Transfer Case Gearshift Hand LEVER(Only)
- 1 Req'd—120919 Transfer Case Gearshift Hand Lever BOLT
- 1 Req'd—125357 Transfer Case Gearshift Hand Lever Bolt NUT
- 1 Req'd—108636 Transfer Case Gearshift Hand Lever Bolt Cotter PIN
- 1 Req'd—589145 Transfer Case Gearshift Hand Lever INTERLOCK
- 1 Req'd—589146 Transfer Case Gearshift Hand Lever Interlock PIN
- 1 Req'd—103373 Transfer Case Gearshift Lever Interlock Pin Cotter PIN
- 1 Req'd—589147 Transfer Case Gearshift Hand Lever Interlock SPRING
- 1 Req'd—589150 Transfer Case Gearshift LEVER AND BUSHING Assembly
- 1 Req'd—589138 Transfer Case Gearshift Lever BUSHING (Only)
- 1 Req'd—589136 Transfer Case Gearshift Lever BRACKET AND BUSHING Assembly
- 2 Req'd—589138 Transfer Case Gearshift Lever Bracket and BUSHING(Only)
- 1 Req'd—103200 Transfer Case Gearshift Lever Bracket STUD
- 1 Req'd—120369 Transfer Case Gearshift Lever Bracket Stud NUT
- 1 Req'd—120382 Transfer Case Gearshift Lever Bracket Stud LOCK-WASHER
- 1 Req'd—122194 Transfer Case Gearshift Lever Bracket SCREW (Long)
- 1 Req'd—120382 Transfer Case Gearshift Lever Bracket Screw LOCK-WASHER
- 2 Req'd—122040 Transfer Case Gearshift Lever Bracket SCREW (Short)
- 2 Req'd—120214 Transfer Case Gearshift Lever Bracket Screw LOCK-WASHER
- 1 Req'd—589139 Transfer Case Gearshift Lever SHAFT AND LEVER Assembly
- 1 Req'd—131016 Transfer Case Gearshift Lever Shaft Plain WASHER
- 1 Req'd—119209 Transfer Case Gearshift Lever Shaft Cotter PIN
- 1 Req'd—589130 Transfer Case Gearshift Lever ROD Assembly
- 1 Req'd—104038 Transfer Case Gearshift Lever Rod YOKE
- 1 Req'd—120369 Transfer Case Gearshift Lever Rod Yoke End NUT
- 1 Req'd—138084 Transfer Case Gearshift Lever Rod Yoke End Clevis PIN (Front)

- 1 Req'd—103373 Transfer Case Gearshift Lever Rod Yoke End Cotter PIN
- 1 Req'd—657929 Transfer Case Gearshift Lever Rod Yoke End Clevis PIN (Rear)
- 1 Req'd—119209 Transfer Case Gearshift Lever Rod Yoke End Cotter PIN
- 1 Req'd—589148 Transfer Case Gearshift Intermediate LEVER AND BUSHING Assembly
- 1 Req'd—589138 Transfer Case Gearshift Lever Intermediate Lever BUSHING (Only)
- 1 Req'd—568661 Transfer Case Gear Shifter COVER
- 1 Req'd—568662 Transfer Case Gear Shifter Cover GASKET
- 4 Req'd—122119 Transfer Case Gear Shifter Cover SCREW
- 4 Req'd—120382 Transfer Case Gear Shifter Cover Screw LOCKWASHER
- 1 Req'd—568663 Transfer Case Gear Shifter SHAFT
- 1 Req'd—568664 Transfer Case Gear Shifter Shaft PACKING
- 1 Req'd—568665 Transfer Case Gear Shifter Shaft Packing NUT
- 1 Req'd—104921 Transfer Case Gear Shifter Lock BALL
- 1 Req'd—568666 Transfer Case Gear Shifter Lock Ball PLUNGER
- 1 Req'd—568667 Transfer Case Gear Shifter Lock Ball Plunger SPRING
- 1 Req'd—568668 Transfer Case Gear Shifter FORK
- 1 Req'd—120668 Transfer Case Gear Shifter Fork Clamp BOLT
- 1 Req'd—125348 Transfer Case Gear Shifter Fork Clamp Bolt NUT
- 1 Req'd—103373 Transfer Case Gear Shifter Fork Clamp Bolt Cotter PIN
- 1 Req'd—599477 Transfer Case Shift FORK
- 1 Req'd—517362 Transfer Case Shift Fork SCREW (Lock)
- 1 Req'd—556944 Transfer Case Shift Fork Screw LOCKWIRE
- 1 Req'd—599476 Transfer Case Shift RAIL
- 1 Req'd—104919 Transfer Case Shift Rail Poppet BALL
- 1 Req'd—579195 Transfer Case Shift Rail Poppet SPRING
- 1 Req'd—599478 Transfer Case Shift Rail Poppet SCREW
- 1 Req'd—103893 Transfer Case Shift Rail Expansion PLUG
- 1 Req'd—915561 Transfer Case Shift Rail OIL SEAL Assembly

TRANSFER CASE PARTS—SUB-GROUP 0808

- 2 Req'd—589340 Transfer Case Mounting STUD
- 2 Req'd—589000 Transfer Case Mounting Stud SPACER
- 2 Req'd—128027 Transfer Case Mounting Stud NUT
- 2 Req'd—119209 Transfer Case Mounting Stud Nut Cotter PIN
- 1 Req'd—589001 Transfer Case Support BRACKET
- 3 Req'd—565521 Transfer Case Support Bracket REINFORCEMENT
- 2 Req'd—594681 Transfer Case Support Bracket Reinforcement SCREW (Case to Support)
- 2 Req'd—594683 Transfer Case Support Bracket Reinforcement to Cross-member BOLT
- 2 Req'd—128027 Transfer Case Support Bracket Reinforcement Bolt NUT
- 2 Req'd—119209 Transfer Case Support Bracket Reinforcement Bolt Nut COTTER PIN
- 1 Req'd—568981 Transfer Case Support Bracket Support INSULATOR

TRANSFER CASE CONTROL—MODEL T203—SUB-GROUP 0806

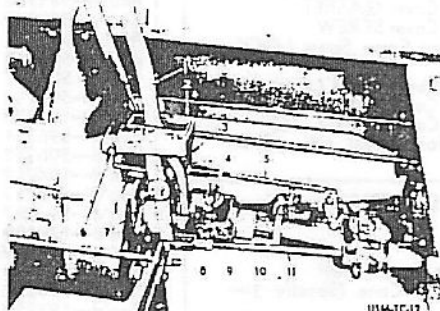


Ref. No.	Part Name	Ref. No.	Part Name
1	Transfer Case Gearshift Hand LEVER	7	Transfer Case Gearshift SHAFT AND LEVER Assembly
2	Transfer Case Gearshift Lever BRACKET AND BUSHINGS	8	Transfer Case Gearshift LEVER AND BUSHING
3	Transfer Case Declutch Lower LEVER (Serviced in Assembly)	9	Transfer Case Gearshift Hand Lever BOLT
4	Transfer Case Declutch Upper LEVER	10	Transfer Case Gearshift Intermediate LEVER AND BUSHING
5	Transfer Case Declutch Lever ROD	11	Transfer Case Gearshift Lever ROD
6	Transfer Case Gearshift Hand Lever Inter-Lock PIN		

1: CURRENT NUMBER—FOR PREVIOUS NUMBER, SEE PARTS SUPERSEDECE LIST.

SNL 3-657

TRANSFER CASE—GROUP 08

EXPLODED VIEW OF TRANSFER CASE
FOR MODEL T223—6x6 TRUCK

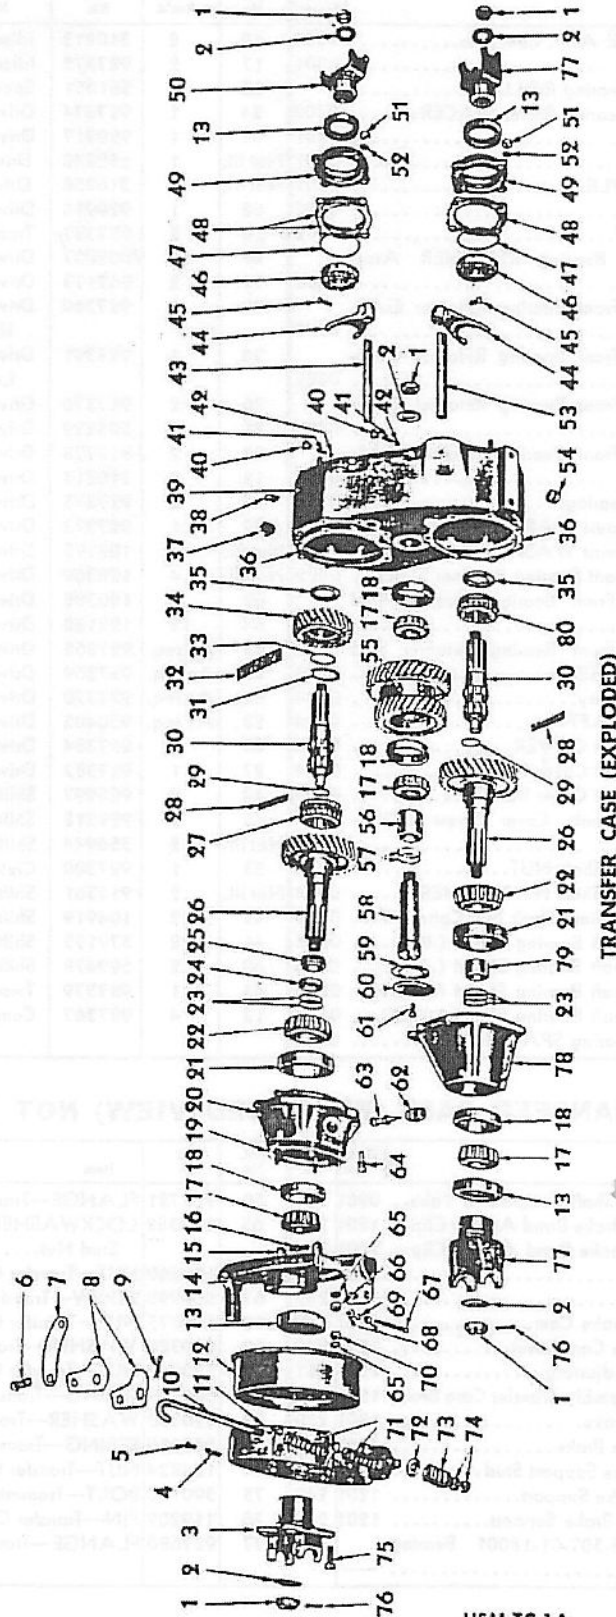

TRANSFER CASE (EXPLODED)

USM-TC-1A

TRANSFER CASE—GROUP 08

PAGE 1

INDEX OF PARTS IN TRANSFER CASE SHOWN IN EXPLODED VIEW ON PAGE 190 FOR MODEL T-223

Ref. No.	No. Req'd.	Part No.	Name	Sub Group	Ref. No.	No. Req'd.	Part No.	Name	Sub Group
Not III.	1	927382	Transfer CASE Assy. Complete.....	0800	18	2	310213	Idler Gear Bearing CUP.....	0803
39	1	927378	Assy. Partial.....	0801	17	2	927375	Idler Gear Bearing CONE.....	0803
32	70	862159	Drive Gear Bearing ROLLER.....		25	1	561651	Speedometer Drive GEAR.....	
33	1	927769	Drive Gear Bearing Roller SPACER.....	0802	24	1	927374	Drive Gear SPACER.....	0810
37	1	666853	Filler PLUG.....	0801	63	1	929917	Drive PINION.....	0810
54	1	103875	Drain PLUG.....	0801	Not III.	1	652840	Drive Pinion Oil SEAL.....	0810
38	1	915564	Breather NIPPLE.....	0801	Not III.	1	516268	Drive Pinion BUSHING.....	0810
34	1	927381	Drive GEAR.....	0802	62	1	929918	Drive Pinion Retainer NUT.....	0810
30	2	927385	Drive SHAFT.....	0802	26	2	927387	Transfer Case Driven Gear SHAFT.....	0803
49	2	927389	Drive Shaft Bearing RETAINER Assy. Front.....	0802	28	30	602007	Driven Shaft ROLLERS.....	0803
48	As req.	927395	Drive Shaft Front Bearing Retainer GASKET (.009).....	0802	29	2	862173	Driven Gear Shaft Rollers Snap RING.....	0803
48	As req.	927396	Drive Shaft Front Bearing Retainer GASKET (.013).....	0802	20	1	927360	Driven Shaft Bearing RETAINER Assy. Upper.....	0803
48	As req.	927397	Drive Shaft Front Bearing Retainer GASKET (.018).....	0802	78	1	927391	Driven Shaft Bearing RETAINER Assy. Lower.....	0803
48	As req.	927398	Drive Shaft Front Bearing Retainer GASKET (.022).....	0802	36	2	927376	Driven Shaft Bearing Retainer GASKET.....	0803
46	2	927630	Drive Shaft Bearing.....	0802	21	2	503229	Driven Shaft Bearing CUP Front.....	0803
35	2	927394	Drive Shaft Thrust WASHER Outer.....	0802	22	2	913778	Driven Shaft Bearing CONE Front.....	0803
31	1	928999	Drive Shaft Thrust WASHER Inner.....	0802	18	2	310213	Driven Shaft Bearing CUP Rear.....	0803
Not III.	8	103217	Drive Shaft Front Bearing Retainer STUD.....	0802	Not III.	4	927375	Driven Shaft Bearing CONE Rear.....	0803
51	8	120370	Drive Shaft Front Bearing Retainer Stud NUT.....	0802	79	1	927373	Driven Shaft SPACER.....	0803
52	8	120383	Drive Shaft Front Bearing Retainer Stud LOCKWASHER.....	0802	Not III.	4	103195	Driven Shaft Retainer STUD.....	0803
55	1	927390	Idler GEAR Assy.....	0804	65	4	120369	Driven Shaft Retainer Stud NUT.....	0803
58	1	927361	Idler Gear SHAFT.....	0804	64	12	122138	Driven Shaft Retainer Stud LOCKWASHER.....	0803
60	1	927365	Idler Gear Shaft COVER.....	0804	23	As req.	927368	Driven Shaft Retainer Stud SCREW.....	0803
59	1	927364	Idler Gear Shaft Cover GASKET.....	0804	23	As req.	927369	Driven Shaft Bearing SHIM (.004).....	0803
61	3	122007	Idler Gear Shaft Cover SCREW.....	0804	23	As req.	927370	Driven Shaft Bearing SHIM (.005).....	0803
Not III.	3	120214	Idler Gear Shaft Cover Screw LOCKWASHER.....	0804	23	As req.	930402	Driven Shaft Bearing SHIM (.0125).....	0803
1	5	562536	Gear Retainer Shaft NUT.....	0804	80	1	927384	Driven Shaft Bearing SHIM (.015).....	0803
2	5	578994	Gear Retainer Shaft Nut WASHER.....	0804	27	1	927383	Driven Shaft Clutch GEAR.....	0803
Not III.	1	119209	Idler Gear Retainer Shaft Nut Cotter PIN.....	0804	44	2	928997	Driven Shaft Two Speed Clutch GEAR.....	0803
57	As req.	927368	Idler Gear Shaft Bearing SHIM (.004).....	0804	45	2	929212	Shift Fork.....	0805
57	As req.	927369	Idler Gear Shaft Bearing SHIM (.005).....	0804	Not III.	2	556944	Shift Fork SCREW.....	0805
57	As req.	930402	Idler Gear Shaft Bearing SHIM (.015).....	0804	53	1	927380	Shift Fork Screw Lock WIRE.....	0805
57	As req.	927370	Idler Gear Shaft Bearing SHIM (.0125).....	0804	Not III.	2	915561	Clutch Shift RAIL.....	0805
56	1	927366	Idler Gear Bearing SPACER.....	0804	42	2	104919	Shift Rail Oil SEAL Assy.....	0805
					41	2	579195	Shift Rail Poppet BALL.....	0805
					40	2	599478	Shift Rail Poppet Ball SPRING.....	0805
					43	1	927379	Shift Rail Poppet SCREW.....	0805
					13	4	927367	Two Speed Shift RAIL.....	0805
								Companion Yoke SEAL.....	0803


PARTS SHOWN IN TRANSFER CASE (EXPLODED VIEW) NOT INCLUDED IN GROUP 08

Ref. No.	Part No.	Item	Group No.	Page No.	Ref. No.	Part No.	Item	Group No.	Page No.
3	598930	FLANGE—Transmission Shaft Companion Yoke..	0901	207	50	928721	FLANGE—Transfer Case Companion (Trans. End)	0901	207
4	517384	SPRING—Transfer Case Brake Band Anchor Clip..	1201	250	65	120382	LOCKWASHER—Transfer Case Brake Support Stud Nut.....	1201	249
5	596694	SCREW—Transfer Case Brake Band Anchor Clip..	1201	250	66	120369	NUT—Transfer Case Brake Support Stud.....	1201	251
6	657929	PIN—Brake Cam.....	1201	249	67	566990	SCREW—Transfer Case Brake Adjusting.....	1201	251
7	929365	LINK—Brake Spacer.....	1201	249	68	120375	NUT—Transfer Case Brake Adjusting Screw.....	1201	251
8	556908	LEVER—Transfer Case Brake Cam.....	1201	249	69	120380	WASHER—Transfer Case Brake Adjusting Screw.....	1201	251
9	103396	PIN—Transfer Case Brake Cam Lever.....	1201	249	70	125913	NUT—Transfer Case Brake Drum Bolt.....	1201	250
10	580048	BOLT—Transfer Brake Adjusting.....	1201	251	71	566729	SPRING—Transfer Brake Adjusting Bolt.....	1201	251
11	586888	BAND, W/LINING Assembly Transfer Case Brake	1201	250	72	120395	WASHER—Transfer Case Adjusting Bolt.....	1201	251
12	567371	DRUM—Transfer Case Brake.....	1201	250	73	580050	SPRING—Transmission Brake Operating.....	1201	251
14	927388	SUPPORT—Transfer Case Brake.....	1201	252	74	124834	NUT—Transfer Case Adjusting Bolt.....	1201	251
15	120369	NUT—Transfer Case Brake Support Stud.....	1201	252	75	590140	BOLT—Transmission Brake Drum.....	1201	250
16	588986	STUD—Transfer Case Brake Support.....	1201	249	76	119209	PIN—Transfer Case Companion Yoke Nut.....	0901	208
19	927393	GASKET—Transfer Case Brake Support.....	1201	249	77	927680	FLANGE—Transfer Case Companion.....	0901	207
47	927630	RING—(Serviced in G-507-01-18001 Bearing Assembly).....	—	—					

TRANSFER CASE—GROUP 08

TRANSFER CASE CONTROL AND PARTS SUB-GROUPS—0805

VIEW OF TRANSFER CASE CONTROL FOR MODEL T223

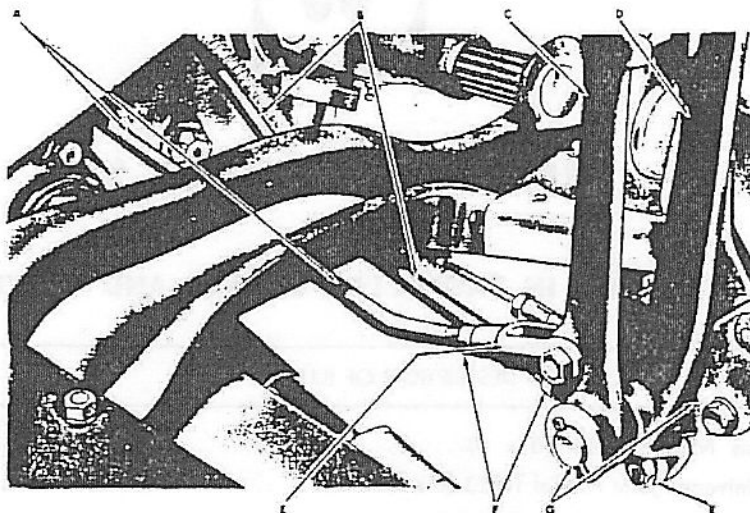

TRANSFER CASE CONTROL

TC-13

INDEX OF CONTROL PARTS FOR MODEL T223

REF. NO.	NO. REQ.	PART NO.	PART NAME	SUB-GROUP	REF. NO.	NO. REQ.	PART NO.	PART NAME	SUB-GROUP
G	1	926288	Transfer Case Cont. Lever BRACKET and SHAFT Assy.....	0805		2	914510	Transfer Case Cont. Shift Bracket SPACER—Lower	0805
C	1	926667	Transfer Case Cont. De-Clutch LEVER and BUSH-ING Assy.....	0805		3	122188	Transfer Case Cont. Shift Bracket SCREW—Long.	0805
	1	926677	Transfer Case Cont. De-Clutch Lever BUSHING...	0805		3	120382	Transfer Case Cont. Shift Lever Bracket Screw LOCKWASHER.....	0805
A	1	926809	Transfer Case Cont. De-Clutch Lever ROD Assy...	0805	B	1	926811	Transfer Case Cont. Shift Lever ROD Assy.....	0805
	1	117825	Transfer Case Cont. De-Clutch Lever Rod Yoke END.....	0805	E	1	117825	Transfer Case Cont. Shift Lever Rod Yoke END...	0805
	1	120370	Transfer Case Cont. De-Clutch Lever Rod Yoke End NUT.....	0805	F	1	120370	Transfer Case Cont. Shift Lever Rod Yoke End NUT	0805
	1	869770	Transfer Case Cont. De-Clutch Lever Rod Yoke Spring WASHER.....	0805		1	869770	Transfer Case Cont. Shift Lever Rod Yoke Spring WASHER.....	0805
	1	928666	Transfer Case Cont. De-Clutch Lever Rod BOLT...	0805		1	928666	Transfer Case Cont. Shift Lever Rod BOLT.....	0805
	1	128014	Transfer Case Cont. De-Clutch Lever Rod Bolt NUT	0805		1	128014	Transfer Case Cont. Shift Lever Rod Bolt NUT...	0805
	1	108636	Transfer Case Cont. De-Clutch Lever Rod Bolt Nut Cotter PIN.....	0805		1	108636	Transfer Case Cont. Shift Lever Rod Bolt Nut Cotter PIN.....	0805
	1	119209	Transfer Case Cont. De-Clutch Lever Rod Cotter PIN—Rear.....	0805		1	119209	Transfer Case Cont. Shift Lever Rod Cotter PIN—Rear.....	0805
D	1	926291	Transfer Case Cont. Shift LEVER and BUSHING Assy.....	0805		1	927678	Transfer Case BRACKET—Right.....	0808
	1	926677	Transfer Case Cont. Shift Lever BUSHING.....	0805		1	927679	Transfer Case BRACKET—Left.....	0808
	1	131017	Transfer Case Cont. Shift Shaft PLAIN WASHER	0805		4	921002	Transfer Case Bracket INSULATOR.....	0808
	1	103399	Transfer Case Cont. Shift Shaft Cotter PIN.....	0805		4	928715	Transfer Case Bracket to Crossmember BOLT Short	0808
	1	929032	Transfer Case Cont. Lever SPACER.....	0805		4	928716	Transfer Case Bracket to Crossmember BOLT Long	0808
	1	921865	Transfer Case Cont. Shift Lever Bracket SPACER—Upper.....	0805		8	128014	Transfer Case Bracket to Crossmember Bolt NUT...	0808
						8	108636	Transfer Case Bracket to Crossmember Bolt Cotter PIN.....	0808
						4	599878	Transfer Case Mtg. SCREW.....	0808
						4	120384	Transfer Case Mtg. Screw LOCKWASHER.....	0808

SERVICE PACKAGES—MODEL T223 TRANSFER CASE

TRANSFER CASE GASKET SET

⌘⌘

PART NO. 1057772

TRANSFER CASE ADJUSTING
SHIM PACKAGE

⌘⌘

PART NO. 1057771

TRANSFER CASE OIL SEAL KIT

⌘⌘

PART NO. 1057773